

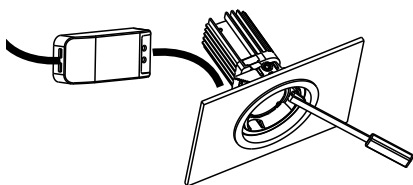
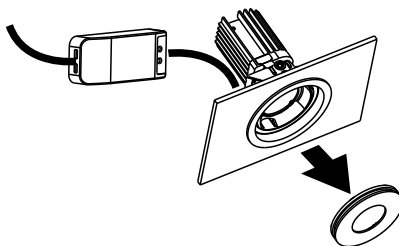



Installation guide: maintenance/driver replacement Mood adjustable S/M

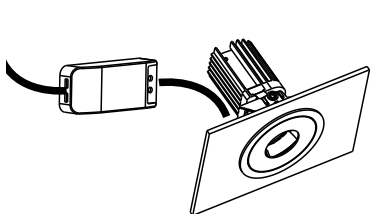


Remove optical/
heating part using
tool provided

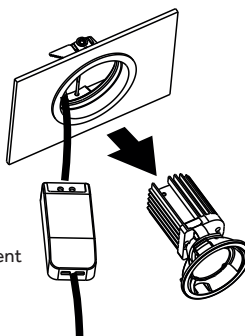

Driver
replacement

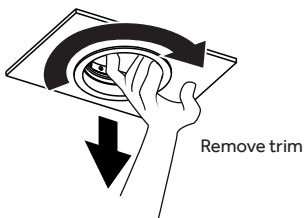

Remove trim

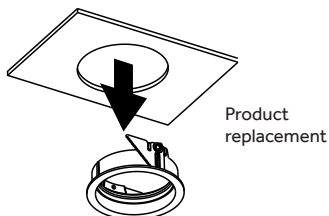

Product
replacement